



# Instructions for Installing Your Sew Steady Universal Table & Insert Grid

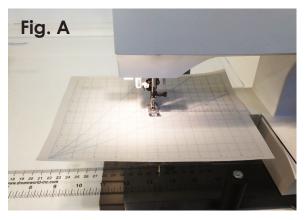






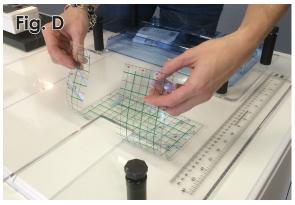

- 1. Place Grid paper-side up (with logo on top left) over the freearm
- Line-up center point of the Grid with the needle on your machine (set presser foot & needle down to help keep Grid stable) (see Fig. A)
- 3. Tape Grid onto Table/Insert to secure (see Fig. B)
- 4. Move Table away from machine, or remove Insert from cabinet
- 5. Use a pencil to create a tracing or rub of the Table/Insert cutout around the freearm (see Fig. C)
- 6. Remove Grid
- 7. Cut out freearm shape from Grid along your tracing or rub
- Peel paper-backing off Grid, using perforated edge
- 9. Attach Grid to underside of Table/Insert starting at the tip of the free arm, Grid will appear upside-down & reversed (see Fig. D)
- 10. Secure Grid to underside of Table/Insert, smooth out air bubbles with edge of credit card or driver's license
- 11. Place Table back onto machine, or place Insert back into cabinet, making sure Table/Insert is level with the top of the freearm (see photo on reverse)
- Attach Table Lock to smooth surface of both machine and Table (see photo on reverse; Table Lock may not work on all machines)

#### \*GRID IS REMOVABLE!\*

The Sew Steady Universal Table/Insert Grid is to be used as a measuring tool, not a cutting tool. We <u>never</u> recommend cutting on a Sew Steady Table or Insert.

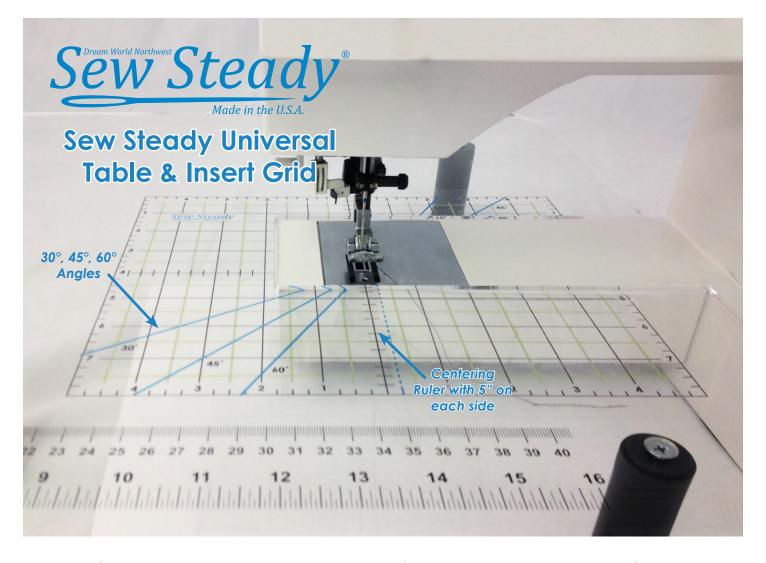

## Grid measures 8" x 10", and is the perfect compliment to the Universal Sew Straight Guide

### **INCLUDES:**

- 8" x 10" Grid which has centering ruler with 5" on each side, includes standard measurements and angles (installation instructions on reverse)
- Acrylic Table Lock with 1 suction cup

### **Proudly Made in the USA**





Includes Table Lock to help secure Table to sewing machine

